



Lectern Control Panel

OPENING SCREEN

Initially, the Opening Screen will be shown. Touch the emblem to access the Main Menu Screen.

MAIN MENU SCREEN

This screen contains controls for devices located at the lectern.

MAIN CONTROLS

The following controls are available from the Main Menu Screen. PC Selection Screen, Document Camera Control Screen, Auxiliary Video Selection Screen, VCR Control Screen.



SOURCES: Touch the **PC'S**, **DOC CAM**, **AUX VIDEO**, or **VCR** to select an active audio/video source. A control screen for the source that you select appears.

COURT SEAL: Touch this button to return to the opening screen.

PLAYBACK VOLUME: These controls act as the main volume control. Touch the **DOWN**, **UP**, or **MUTE** buttons to decrease, increase, or mute the volume as desired.

JURY VIDEO ON / JURY VIDEO OFF: Touch this button if you want to stop the video feed to all locations. Touch this button a second time to turn video back on.

POWER OFF: This screen appears when you touch the **PC's** button. Touch the **PODIUM** button to select the computer at the lectern as the active source.

DOCUMENT CAMERA CONTROL SCREEN

This screen appears when you touch the **DOC CAM** button.



Document Camera Controls

DOC CAM FRONT / DOC CAM REAR: Touch the **DOC CAM FRONT** or **DOC CAM REAR** buttons to select the front or rear Document Camera as the active source.

POWER OFF: Touch This button to turn the Document Camera off.

UPPER LAMPS / LOWER LAMPS OFF: Touch these buttons to turn the upper lamps on, turn the lower lamps on, or turn all lamps off.

ZOOM IN / ZOOM OUT: These buttons will zoom the image. Touch the **ZOOM IN** button to magnify the image, , touch the **ZOOM OUT** button to reduce the image.

FOCUS IN / FOCUS OUT: These buttons will adjust the overall viewing of the image. Press the **FOCUS IN** to focus in, press the **FOCUS OUT** button to focus out.

NEG POSITIVE: Touch the **NEG** button to view negative film as a positive image. This function is very useful for viewing 35mm slides, X-rays, **MRI's** and autoradiographs. Touch the **POSITIVE** button to view materials such as printed matter or 3D objects.

AUXILLIARY VIDEO SELECTION SCREEN:

This screen appears when you touch the **AUX VIDEO** button. The auxilliary video input is selected as the active source.



VCR CONTROL SCREEN:

This screen appears when you touch the VCR button. This control represents the standard playback transport controls.

